


Corner Guard CG-2S

Note: Material must be stored, installed and used in controlled ambient conditions.

Fig. 1

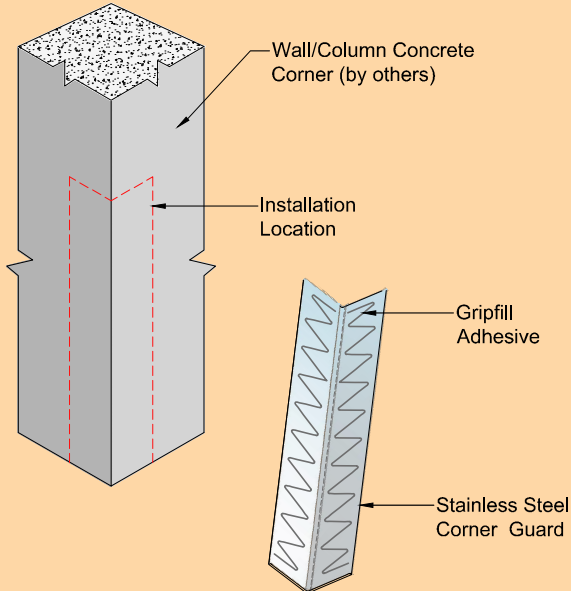

Preparation:

1. The Installation location surface that the corner guard is to be applied must be free from dirt, dust, grease and loose paint.
2. Remove the surface contaminant using sand paper or apply water alcohol to a clean cloth and wipe the surface to provide an appropriate surface for installation of corner guard.

Installation:

3. **Adhesive Installation** - Apply bead of Gripfill Adhesive in a zig-sag pattern over the back of each wing of corner guard. Position corner guard on the installation location and apply pressure until the adhesive is properly grips the wall (*see figure 1*).

4. **Screw-on Installation** - Place the corner guard on the installation location and mark the pre-drilled holes. Remove the corner guard and drill the marked holes using 1/4" drill bit and position the anchors into holes. Return the corner guard over the drilled hole locations and secure in place with self-tapping screws (*see figure 2*).

5. After the completion of installation, clean the exposed surfaces with non-solvent cleaner.

Fig. 2

